



INSPECTION AND MAINTENACNCE																REV/ R0	Date 25 Jan 2025
Interval: This should be judged by odometer reading or months, whichever comes first		KM (x1000)	10	20	30	40	50	60	80	90	100	110	120	130	140	150	160
		Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180
ENGINE																	
1.1	Engine accessory drive belt	Tension check, *Adjustment, *Replacement	I	I	I	I	R	I	I	I	I	R	I	I	I	I	R
1.2	Valve clearance		-	I	-	I	-	-	I	-	I	-	I	-	I	-	I
1.3	Engine oil and engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
1.4	Engine coolant	SUZUKI LLC: Super (Blue) (#1) - First	replace at 150,000 km / 96 mo; thereafter every 75,000 km / 48 mo														
1.5	Engine coolant (continued)	SUZUKI LLC: Standard (Green)	-	-	-	R	-	-	-	R	-	-	-	R	-	-	-
IGNITION																	
2.1	Spark plugs (unleaded fuel, Iridium plug)	DON'T USE!!															
	Spark plugs (leaded fuel, Nickel plug)		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
FUEL																	
3.1	Air cleaner filter element	Paved-road/Offroad	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
3.2	Fuel lines	Dusty condition: Refer to "Severe driving condition" schedule	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-
3.3	Fuel filter		Replace every 105,000 km														
3.4	Fuel tank		-	-	-	I	-	-	-	I	-	-	-	I	-	-	I
#1: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section Of your owners manual. If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 45000 km (27000 miles) or 36 months.)																	

INSPECTION AND MAINTENACNCE																REV/ R0	Date 25 Jan 2025
Interval: This should be judged by odometer reading or months, whichever comes first		KM (x1000)	10	20	30	40	50	60	80	90	100	110	120	130	140	150	160
		Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180
BRAKES																	
5.1	Brake discs and pads (Front)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Brake drums and shoes (Rear)		-	-	I	-	-	I	-	-	I	-	-	I	-	-	I
5.2	Brake hoses and pipes		-	-	I	-	-	I	-	-	I	-	-	I	-	-	I
5.3	Brake pedal (#2)		As Per Suzuki's Standard Schedule														
5.4	Brake fluid		As Per Suzuki's Standard Schedule														
5.5	Brake lever and cable	Check, *Adjustment (1st 15000 km only)	I	-	-	-	-	-	-	I	-	-	-	-	-	-	-
CHASSIS AND BODY																	
6.1	Clutch pedal	-	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
6.2	Clutch fluid (#2)	Clutch fluid supplied from brake fluid reservoir	As Per Suzuki's Standard Schedule														
6.3	Tyres/Wheels (#3)	Including tyre rotation	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I
6.4	Wheel bearings (#4)		As Per Suzuki's Standard Schedule														
6.5	Propeller shafts		As Per Suzuki's Standard Schedule														
6.6	Suspension system (#5)	Additionally Inspect panhad bars, Bushes/mounts for excessive ware or cracks	As Per Suzuki's Standard Schedule														
6.7	Steering system (#6)		As Per Suzuki's Standard Schedule														
6.8	Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W" or Motul 75W recommended	I	-	R	-	-	R	-	-	R	-	-	R	-	-	R
6.9	Automatic transmission		Fluid level; *Fluid change 60 000km; *Fluid hose Replace every 165000 km														
6.10	Transfer oil	Genuine "SUZUKI GEAR OIL 75W" or Motul 75W recommended	I	-	R	-	-	R	-	-	R	-	-	R	-	-	R
6.11	Differential oil	Genuine "SUZUKI SUPER GEAR OIL 75W-85 SYNTHETIC" or Motul 75W-85	R	-	-	-	-	-	R	-	-	-	-	-	-	-	R
6.12	All latches, hinges, locks		-	I	-	-	-	-	-	-	-	-	-	-	-	-	-
6.13	Air conditioner filter element		-	-	-	I	R	-	-	-	I	R	-	-	-	-	I