

CONGRATULATIONS ON THE PURCHASE OF YOUR DES SOL PRODUCT.

Part Number : DSJRDG-G4
Part Description : Des Sol Rear Diff Protection GEN4 (2019 - Current)
Vehicle : Suzuki Jimny 2019 – Current

WARNING

NOTE THE FOLLOWING:

- THIS PRODUCT MUST BE INSTALLED EXACTLY AS PER THE FITTING INSTRUCTIONS BELOW AND ONLY THE HARDWARE SUPPLIED WITH THIS PACK IS TO BE USED
- IN THE EVENT OF DAMAGE TO THE REAR DIFF PROTECTOR, CONTACT YOUR NEAREST DES SOL SUPPLIER – REPAIRS OR MODIFICATIONS MUST NOT BE ATTEMPTED ON THE REAR DIFF PROTECTION.
- THIS PRODUCT AND MOUNTING COMPONENTS MUST NOT BE MODIFIED IN ANY WAY
- DO NOT REMOVE LABELS FROM THIS PRODUCT

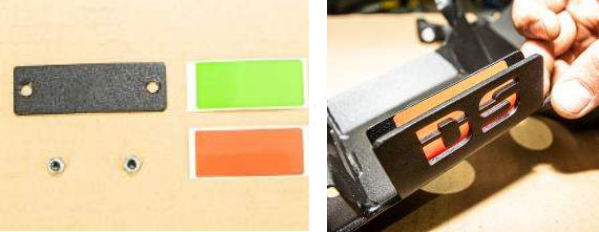


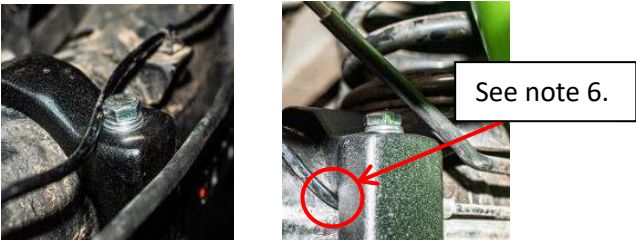
Tools required for installation:

- Ratchet & Sockets:
 - 13mm socket
- Spanners
 - 13mm spanner

ITEMS CONTAINED IN THIS KIT

| | |
|---------------------------|--|
| Main Body | 1 x Main rear diff protector. |
| Axle clamp | 2 x Axle clamps. |
| Diff clamp | 1 x Diff clamp. |
| Fasteners | 2 x M5 Nyloc nuts 6 x M8 HD ZP Spring Washers 6 x M8 HD ZP Washers 2 x M8x60 ZP Bolt Grade 8.8 2 x M8x30 ZP Bolt Grade 8.8 |
| Sticker back plate | 1 x Sticker back plate. |
| Stickers | 1 x Red sticker. 1 x Green sticker. |

REAR DIFF PROTECTOR INSTALLATION

| | |
|---|--|
|  | <ol style="list-style-type: none">1. Choose preferred sticker (Red/Green) and apply to the sticker back plate.2. Fit sticker back plate, using two M5 Nyloc nuts. |
|  | <ol style="list-style-type: none">3. Fit the Main rear diff protector into place; ensure that the protector locates around the shoulder of the rear sump as illustrated. |
|  | <ol style="list-style-type: none">4. The Main rear diff protector is to cradle the rear axle on the left and right hand side. |
|  | <ol style="list-style-type: none">5. Fit the Axle clamps into place using two M8x60 Bolts and lightly tighten.6. Ensure that the ABS cable is not pinched between the axle and clamp on the right hand side of the vehicle.7. Brake lines and other cabling are to be routed on the outside of clamps. |

REAR DIFF PROTECTOR INSTALLATION



8. Fit the Diff clamp using two M8x30 bolts and tighten lightly.



9. Once all parts have been fitted as per instructions 1-8 and happy with positioning of the Rear Diff Protector tighten the bolts and enjoy the peace of mind that our rear diff protector offers.