

CONGRATULATIONS ON THE PURCHASE OF YOUR DES SOL PRODUCT.

Part Number : DSJFDP-G4
Part Description : Des Sol Transfer Case Protection GEN4 (2019 - Current)
Vehicle : Suzuki Jimny 2019 – Current

WARNING

NOTE THE FOLLOWING:

- THIS PRODUCT MUST BE INSTALLED EXACTLY AS PER THE FITTING INSTRUCTIONS BELOW AND ONLY THE HARDWARE SUPPLIED WITH THIS PACK IS TO BE USED
- IN THE EVENT OF DAMAGE TO THE TRANSFER CASE PROTECTION, CONTACT YOUR NEAREST DES SOL SUPPLIER – REPAIRS OR MODIFICATIONS MUST NOT BE ATTEMPTED ON THE TRANSFER CASE PROTECTION.
- THIS PRODUCT AND MOUNTING COMPONENTS MUST NOT BE MODIFIED IN ANY WAY
- DO NOT REMOVE LABELS FROM THIS PRODUCT

Tools required for installation:

- Ratchet & Sockets:
 - 12mm socket
 - 13mm socket
 - 14mm socket
- Axle stands, car ramps or hoist.
- Torque wrench (19-110)

ITEMS CONTAINED IN THIS KIT

Protector plate	1 x Protector plate.
Protector plate mounting brackets	1 x Type-A. 1 x Type-B. 1 x Type-C.
Transfer case arms	1 x Type-A. 1 x Type-B.
Fasteners	9 x M8x20 ZP Bolt Grade 8.8 9 x M8 HD ZP Spring Washers 9 x M8 HD ZP Washers

TRANSFER CASE PROTECTION INSTALLATION



1. Remove standard transfer case arms.



2. Support the transfer case once arms have been removed.



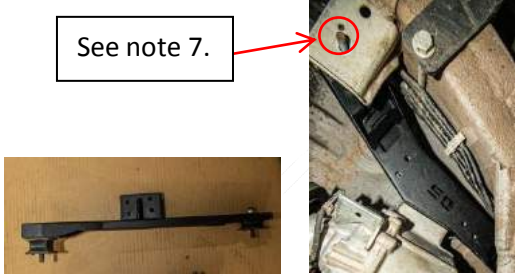



3. Remove transfer case rubber mounts from standard arms.






See note 5.

4. Fit rubber mounts to the Des-Sol transfer case arms.
5. Ensure that the pins are located in the location holes.

TRANSFER CASE PROTECTION INSTALLATION

<p>See note 7.</p> 	<ol style="list-style-type: none">6. Fit type-A transfer case arm using the original bolts.7. Ensure that the pins are located in the location holes.
<p>See note 8.</p> 	<ol style="list-style-type: none">8. Fit type-B transfer case arm using the original bolts.9. Ensure that the pins are located in the location holes.
	<ol style="list-style-type: none">10. Fit type-A protector plate mounting.
	<ol style="list-style-type: none">6. Loosely fit type-B and C protector plate mountings using the supplied M8x20 bolts.

TRANSFER CASE PROTECTION INSTALLATION

	<ol style="list-style-type: none">7. Fit the plate protector into place using the supplied M8x20 bolts.8. Lightly tighten the bolts.
	<ol style="list-style-type: none">9. Adjust the positioning of the protector plate to a suitable position.
	<ol style="list-style-type: none">10. Once all parts have been fitted as per instructions 1-9 check final positioning of the Transfer case protection plate and torque bolts to 20 Nm. Enjoy the peace of mind that our transfer case protector offers.