

## CONGRATULATIONS ON THE PURCHASE OF YOUR DES SOL PRODUCT.

Part Number : DSJRDP-G4  
Part Description : Des Sol Front Diff protection GEN4 (2019 - Current)  
Vehicle : Suzuki Jimny 2019 – Current

### WARNING

**NOTE THE FOLLOWING:**

- THIS PRODUCT MUST BE INSTALLED EXACTLY AS PER THE FITTING INSTRUCTIONS BELOW AND ONLY THE HARDWARE SUPPLIED WITH THIS PACK IS TO BE USED
- IN THE EVENT OF DAMAGE TO THE FRONT DIFF PROTECTOR, CONTACT YOUR NEAREST DES SOL SUPPLIER – REPAIRS OR MODIFICATIONS MUST NOT BE ATTEMPTED ON THE FRONT DIFF PROTECTOR.
- THIS PRODUCT AND MOUNTING COMPONENTS MUST NOT BE MODIFIED IN ANY WAY
- DO NOT REMOVE LABELS FROM THIS PRODUCT

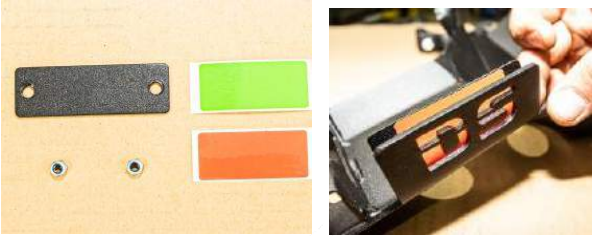



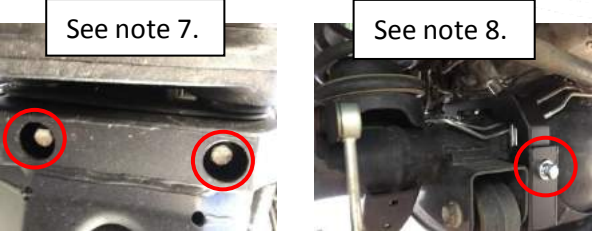
Tools required for installation:

- Ratchet & Sockets:
  - 13mm socket
- Spanners
  - 13mm spanner

## ITEMS CONTAINED IN THIS KIT

<b>Main Body</b>	1 x Main front diff protector.
<b>Axle clamp</b>	1 x Axle clamp.
<b>Diff clamp</b>	1 x Diff clamp.
<b>Fasteners</b>	2 x M5 Nyloc nuts 5 x M8 HD ZP Spring Washers 5 x M8 HD ZP Washers 2 x M8x145 ZP Bolt Grade 8.8 2 x M8x45 ZP Bolt Grade 8.8 1 x M8x20 ZP Bolt Grade 8.8
<b>Sticker back plate</b>	1 x Sticker back plate.
<b>Stickers</b>	1 x Red sticker. 1 x Green sticker.

## FRONT DIFF PROTECTOR INSTALLATION

	<ol style="list-style-type: none"><li>1. Choose preferred sticker (Red/Green) and apply to the sticker back plate.</li><li>2. Fit sticker back plate, using two M5 Nyloc nuts.</li></ol>
	<ol style="list-style-type: none"><li>3. Locate the holes on the Main front diff protector over the spot welded nuts positioned on the side of the right radial arm.</li></ol>
	<ol style="list-style-type: none"><li>4. Fit the Main Diff Protector into place; ensure that the sump shoulder is located correctly.</li></ol>
	<ol style="list-style-type: none"><li>5. Fit the Axle clamp into place using two M8x45 bolts and lightly tighten.</li><li>6. Brake lines and other cabling are to be routed on the inside of the clamp under the rubber guard that is fitted to the Axle clamp.</li></ol>
	<ol style="list-style-type: none"><li>7. Fit the Diff clamp into place, insert the M8x145 bolts from underneath and lightly tighten</li><li>8. Insert the M8x20 bolt on the front of the diff protector.</li></ol>

## FRONT DIFF PROTECTOR INSTALLATION



9. Once all parts have been fitted as per instructions 1-8 and the Front diff protector is fitting snugly, tighten the bolts and enjoy the peace of mind that our Front diff protector offers.

