

## CONGRATULATIONS ON THE PURCHASE OF YOUR DES SOL PRODUCT.

Part Number : DSJRS-G4/DSJRS-G4DR5  
Part Description : Des Sol Rock Sliders GEN4 (3DR/5DR)  
Vehicle : Suzuki Jimny GEN4

### WARNING

**NOTE THE FOLLOWING:**

- THIS PRODUCT MUST BE INSTALLED EXACTLY AS PER THE FITTING INSTRUCTIONS BELOW AND ONLY THE HARDWARE SUPPLIED WITH THIS PACK IS TO BE USED
- IN THE EVENT OF DAMAGE TO THE ROCKSLIDERS, CONTACT YOUR NEAREST DES SOL SUPPLIER – REPAIRS OR MODIFICATIONS MUST NOT BE ATTEMPTED ON THE PRODUCT
- THIS PRODUCT AND MOUNTING COMPONENTS MUST NOT BE MODIFIED IN ANY WAY
- DO NOT REMOVE LABELS FROM THIS PRODUCT

Tools required for installation:

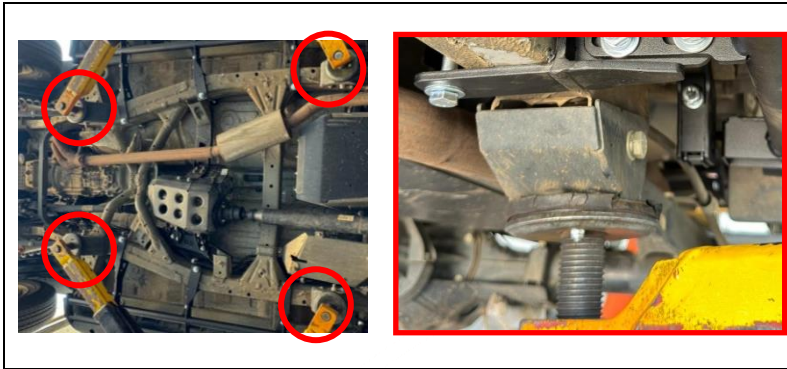

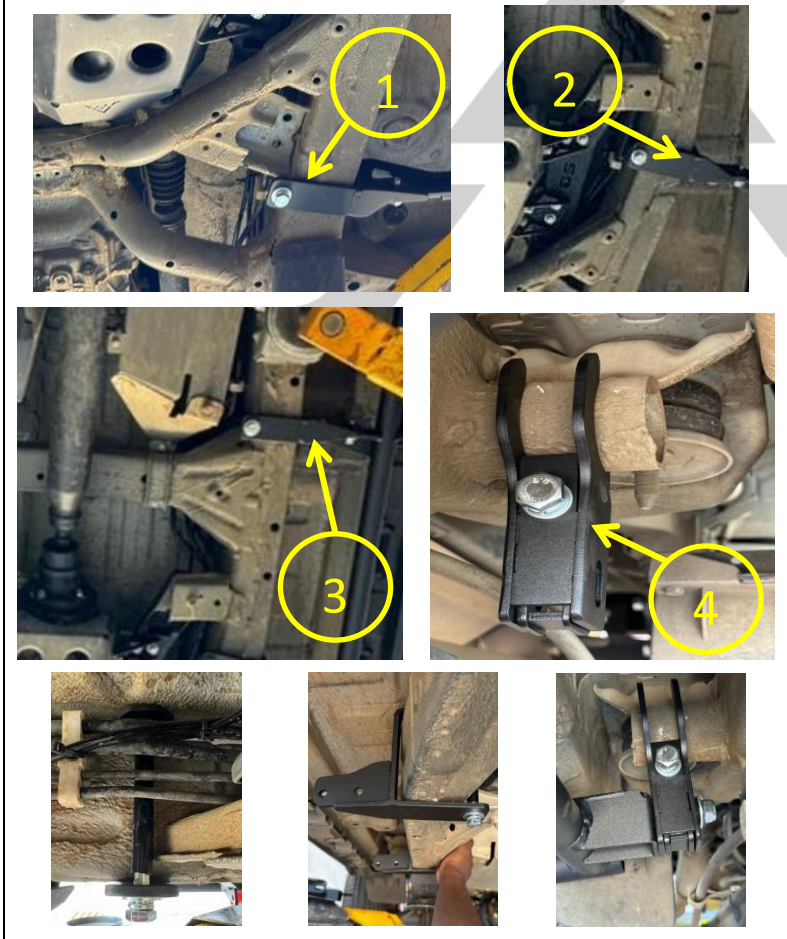
- Ratchet & Sockets:
  - 17mm Socket
- Spanners
  - 17mm spanner
- Torque wrench
- Ruler or tape measure

## ITEMS CONTAINED IN THIS KIT

<b>Main Body</b>	<input type="checkbox"/> 1 x Left <input type="checkbox"/> 1 x Right
<b>Brackets</b>	<input type="checkbox"/> 2 x front brackets <ul style="list-style-type: none"> <li>○ 1 x left</li> <li>○ 1 x right</li> </ul> <input type="checkbox"/> 2 x second brackets <ul style="list-style-type: none"> <li>○ 1 x left</li> <li>○ 1 x right</li> </ul> <input type="checkbox"/> 2 x third bracket <b>(5DR only)</b> <ul style="list-style-type: none"> <li>○ 1 x left</li> <li>○ 1 x right</li> </ul> <input type="checkbox"/> 2 x Y-Clamp
<b>Fasteners</b>	<input type="checkbox"/> 10 of M10 x 30 ZP bolt <b>(14 for 5DR)</b> <input type="checkbox"/> 10 of M10 ZP flat washers <b>(16 for 5DR)</b> <input type="checkbox"/> 10 of M10 ZP spring washers <b>(14 for 5DR)</b> <input type="checkbox"/> 2 of M10 x 130 ZP bolt <input type="checkbox"/> 2 of M10 x 140 ZP bolt <input type="checkbox"/> 2 of M10 x 150 ZP bolt <b>(5DR only)</b> <input type="checkbox"/> 2 plastic pipe protection sleeve <b>(3 for 5DR)</b> <input type="checkbox"/> 2 of M10 ZP Nylock


# ROCKSLIDER FITMENT

## BRACKETS

	<ol style="list-style-type: none"><li>1. Place jacks under radial cups to allow access to chassis for brackets.</li><li>2. Ensure vehicle is securely on jacks.</li></ol>
	<ol style="list-style-type: none"><li>3. Identify the RIGHT hand brackets.<ul style="list-style-type: none"><li>o Note that bracket 3 is taller than bracket 2. (<b>5DR only</b>).</li><li>o The bolt lengths need to be correct in order to avoid vibrations through the vehicle body</li></ul></li></ol>
	<ol style="list-style-type: none"><li>4. The right hand brackets are placed first. Loosely place in the following positions:<ol style="list-style-type: none"><li>1) Against front right transfer case mount.</li><li>2) Between front and rear transfer case mounts</li><li>3) Behind rear cross member(<b>5DR only</b>)</li><li>4) Y-Bracket clamps to the round section of chassis near the rear body mount</li></ol></li><li>5. Brackets are fastened with M10 Bolts, flat washer and spring washer.<ul style="list-style-type: none"><li>o Take care not to damage any fuel/brake lines.</li><li>o Ensure bolts are not fastened tightly so rockslider can be properly aligned.</li><li>o Bracket 1 uses M10 x 130mm bolt.</li><li>o Bracket 2 uses M10 x 140mm bolt.</li><li>o Bracket 3 use M10 x 150mm bolt (<b>5DR only</b>).</li><li>o Y-Clamp uses M10 x 30mm bolt.</li></ul></li></ol>

# ROCKSLIDER FITMENT

## MAIN BODY

	<p>6. Loosely fit Rockslider to brackets using M10 x 30 bolts with flat washer and spring washer.</p> <ul style="list-style-type: none"><li>○ Measure gap between wheel arch and front of rockslider, 65 to 70mm</li><li>○ Ensure rock slider is level with even gap of +/- 20mm between sill and step</li></ul>
	<p>7. Tighten long bracket bolts to secure bracket to chassis.</p> <ul style="list-style-type: none"><li>○ Check rockslider is level with consistent gap.</li></ul> <p>8. Tighten short bracket bolts to secure rockslider to brackets</p> <ul style="list-style-type: none"><li>○ Re-check rockslider is level with consistent gap.</li></ul>
	<p>9. Torque <b>all</b> bolts to 40 N·m</p>
	<p>10. Repeat steps 1 to 9 for LEFT hand side.</p> <ul style="list-style-type: none"><li>○ Use image as reference for location of brackets.</li></ul>

**ENJOY THE PIECE OF MIND THAT YOUR VEHICLE NOW HAS**

**EXTRA UNDERBODY PROTECTION AGAINST ANY HARSH TERRAIN**